



LINE Add friend



VGAME_Bella (Taiwan)

Add Whatsapp



20240105 F201ENH

User's Manual

Index

- [Game Description](#)P.01
- [Operating Instructions](#)P.03
- [System adjustment](#)P.04
- [Cable definition](#)P.06
- [Troubleshooting](#)P.08

NOTE

NOTE

Game Description

★ 【Game play instructions】

《Flying Birds》 Based on the bird ecology theme of the plane LCD monitor — lottery-type fish game, the game uses a high-definition screen design, support 2/3/4/6/8/10 while online games. 18 different types of birds, 11 kinds of powerful special Items, a clear definition, and a detailed outdoor scene. It's the most popular game machine in your game center.

★ 【Game Features Description】

▶ Special Item—Floating in the field. Attack them to release special power!!
















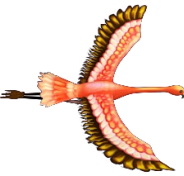


- ◆ Phoenix Flame→ Randomly upgrade normal bullet to powerful Phoenix Flame for free.
- ◆ Sky-Quake Drum→ Sonic attacks the birds near the Sky-Quake Drum.
- ◆ Wooden Mechanical Kite→ Wooden Mechanical Kites assault all normal birds in the field at once.
- ◆ Bird Balloon→ Continuously press the button to break the Bird Balloon and get bonus scores.

▶ Special Bird

- ◆ Happy Birds→ Drop an egg or launch a special team attack.
- ◆ Bird King → The bird with the whirlwind kills all same kinds of birds in the field.
- ◆ Colorful Phoenix→ Attack the Colorful Phoenix has a chance to drop a feather. Success defeat it will win a high score award.
- ◆ Smash The Golden Egg→ Collect 5 feathers drop from the Colorful Phoenix will launch the bonus game.
- ◆ Lucky Bird→ Kill any normal bird has a chance to become Lucky Bird and get 2 to 10 times scores.
- ◆ Gold Eagle → Get x200~500 randomly.
- ◆ Gold Peacock → Get x100~200 randomly.

Game Description

★ (Odds Table)

| | | |
|---|---|---|
|  |  |  |
| x2 | x2 | x3 |
|  |  |  |
| x5 | x6 | x7 |
|  |  |  |
| x8 | x9 | x10 |
|  |  |  |
| x12 | x15 | x18 |
|  |  |  |
| x20 | x25 | x30 |
|  |  |  |
| x40 | x60 | x80 |

NOTE

NOTE

Operating Instructions

★ [Operation Panel Instruction]



★ [Basic Operations]

- ▶ It's easy to play!! After insert coins to credit, select your bet by Raise Bet button, aim your target by Direction Controller and SHOOT!!

! CAUTION

- ◆ **Auto Attack** → Press the "Shoot Button" 3 seconds to launch.
- ◆ **Aim Attack** → Press the direction controller "Down" for 3 seconds to launch. After launched, press "Up or Down" to select bird to aim.

★ [Play skills]

- ▶ Use your special weapons well to win Huge score rewards. Select your launch timing, aim your target at birds cluster.

System Adjustment

★ [Parameter Adjust-Direct Adjust]

| Item | Default | Parameters |
|-------------------|-------------|---|
| Minimum Bet | 50 | 1~10, 20, 30, 40, 50, 100, 200, 300, 400, 500, 1000, 2000, 3000, 4000, 5000, 9999 |
| Maximum Bet | 1000 | 1~10, 20, 30, 40, 50, 100, 200, 300, 400, 500, 1000, 2000, 3000, 4000, 5000, 9999 |
| Bet Increase rate | 10 | 1~10, 20, 30, 40, 50, 100, 200, 300, 400, 500, 1000, 2000, 3000, 4000, 5000, 9999 |
| Credit Limit | 1000000 | 5000, 6000, 10000, 15000, 20000, 25000, 30000, 40000, 50000, 100000, 150000, 200000, 250000, 400000, 500000, 1000000, 2000000, 2500000, 4000000, 5000000, 10000000, 20000000, 25000000, 40000000, 50000000, 90000000 |
| System Limit | 2000000 | 30000, 40000, 50000, 100000, 150000, 200000, 250000, 300000, 400000, 500000, 600000, 800000, 1000000, 2000000, 2500000, 5000000, 2700000, 3000000, 4000000, 5000000, 6000000, 8000000, 10000000, 20000000, 25000000, 30000000, 40000000, 50000000, 60000000, 80000000, 90000000 |
| Ticket Ratio | 1 | 1/100, 1/80, 1/50, 1/25, 1/20, 1/15, 1/10, 1/8, 1/5, 1/4, 1/3, 1/2, 1, 2, 3, 4, 5, 8, 10, 15, 20, 25, 30, 35, 40, 45, 50, 80, 100 |
| Withdraw Mode | Menu (Coin) | Menu (Coin), Menu (Ticket), Key Out (Coin), Key Out (Ticket), Game (Coin), Game (Ticket), Print voucher |
| Shooting Speed | Medium | Slow, Medium, Fast |
| Bullet Speed | Medium | Slow, Medium, Fast |
| AutoTrigge Time | No | No, Slow, Medium, Fast |
| Auto shoot | On | Off, On |
| LOCK | On | Off, On |
| Player Steering | Standard | Inverse, Standard |
| Station Quantity | 8(3-1) | 2(2-0), 3(3-0), 4(2-0), 4(4-0), 6(2-1), 6(3-0), 8(2-2), 8(3-1), 8(4-0), 10(3-2), 10(4-1) |
| BGM | On | Off, On, SE, BGM |
| Volume | 4 | 0, 1, 2, 3, 4, 5, 6, 7, 8 |

Troubleshooting

| Message | Solution |
|---------------------------------|--|
| Error on the same seat | Make sure the control Board's voltage is set on 12V and 5V at the same time, then check the communicated line is normal. By the way, please also check the Du Pont line (Rainbow line) is normal or not. |
| Error on the different seat | Testing the Du Pont line (Rainbow line) on the each seats. If the different seats are broken, please check the Du Pont line and Button. |
| Unable to play on the all seats | Make sure the communication line is normal. |
| Coin Out error | Make sure the cash box are empty or not. Then, check solving the problem successfully. |
| Unable to Coin Out | Please don't set the zero on the Coin Ratio. |
| COIN LIMIT | The system notice unable to key in, but it can keep on playing the game. |
| SYSTEM LIMIT | If it can't play successfully, please press the "Key out" on the seat. Then, check solve the problem. |

Troubleshooting

| Message | Solution |
|---|--|
| Warning:Electric shock or Frequency interference detected | Reboot or wait for a while. |
| | (You also can check the report time period whether it depends on the operator setting) If it's still defective, please contact us. |
| Please Report Your Records 【2】 | Please reset with the coder. (If you adjust the Coin Ratio, then you will key in number with the coder. Finally, you reset with the coder.) |
| Please Report Your Records 【3】 | If it's still defective, please contact us. Then, tell us what appears on the screen. |
| Please Report Your Records 【4】 | If it's still defective, please contact us. Then, tell us what appears on the screen. |
| Appearing "999" on the game screen | If it's still defective, please contact us. Then, tell us what appears on the screen. |
| Linked line error on the screen | Make sure the control Board's voltage is set on 12V and 5V at the same time, then check the Communication line. |
| The game screen in unstable, appearing the faulty line. | Please check the Communication line and Cabinet. |

System Adjustment

★【Parameter Adjust-Report Adjust】

| Item | Default | Parameters |
|------------------------|-----------------|--|
| Coin Ratio | 100 | 1, 2, 4, 5, 10, 20, 25, 40, 50, 100, 200, 250, 400, 500, 1000, 2000, 3000, 4000, 5000, 10000 |
| Key In Ratio | 1000 | 0, 10, 20, 25, 40, 50, 100, 200, 250, 400, 50, 1000, 2000, 2500, 4000, 5000, 10000, 20000, 30000, 40000, 50000, 100000 |
| Game Difficulty | 6 | 0 ~ 20 |
| Location Scale | Medium Location | Small Location, Medium Location, Large Location |
| Bonus odds rate | Mid | Low, Mid, High |
| Report Time period | 10 | 0 ~ 30 |
| Profit Limit to Report | 100000 | 0, 10000, 20000,, 300000 |
| System Time | -- | YYYY/MM/DD HH:MM:SS |
| Change Password | 00000000 | |



Total record default password : 『 0000 0000 』

Cable Definition

| | | | |
|------------|----|----|----------------|
| Up | 1 | 2 | Down |
| Left | 3 | 4 | Right |
| Raise bet | 5 | 6 | Shoot |
| Coin in | 7 | 8 | Key in |
| Key out | 9 | 10 | Pay out |
| Ticket SW | 11 | 12 | Hopper SW |
| Ticket SSR | 13 | 14 | Hopper SSR |
| Shoot lamp | 15 | 16 | Raise bet lamp |
| +12V | 17 | 18 | +12V |
| +12V | 19 | 20 | +12V |
| +5V | 21 | 22 | Ground |
| Ground | 23 | 24 | Ground |
| Ground | 25 | 26 | Ground |

Cable Definition

★ [Anti-shock wiring diagram]

