

Cable definition

Up	1	2	Down
Left	3	4	Right
Raise bet	5	6	Shoot
Coin in	7	8	Key in
Key out	9	10	Pay out
Ticket SW	11	12	Hopper SW
Ticket SSR	13	14	Hopper SSR
Shoot lamp	15	16	Raise bet lamp
+12V	17	18	+12V
+12V	19	20	+12V
+5V	21	22	Ground
Ground	23	24	Ground
Ground	25	26	Ground



User's Manual

Index

Game Description	P.1
Operating Instructions	P.3
System adjustment	P.4
Cable definition	P.6

System adjustment

◆ Regolazione di segnalazione

Regolazione di segnalazione		
Item	Default	Parametro
Rapporto Moneta	100	1、2、5、10、20、25、50、100、200、250、500、1000
Rapporto Chiave in entrata	1000	10、20、25、50、100、200、250、400、500、1000、2000、2500、3000、4000、5000、10000
Difficoltà del Gioco	3	0、1、2、3、4、5
Scala di Posizione	Posizione Piccola	Posizione Piccola、Posizione Media、Posizione Grande
Tasso Arma Speciale	Bassa Frequenza	Bassa Frequenza、Media Frequenza、Alta Frequenza
Tasso di Probabilità Bonus	Bassa Frequenza	Bassa Frequenza、Media Frequenza、Alta Frequenza
Intervallo di Tempo della Segnalazione	10	1 ~ 30
Limite di Guadagno da segnalare	100000	10000 ~ 300000
Tempo del Sistema	--	YYYY/MM/DD HH:MM:SS

Total record default password : 『 0000 0000 』

Reset record default password : 『 7777 7777 7777 7777 』

Parameter adjust default password : 『 6666 6666 6666 6666 』

PS : If your machine is with decoder, you must report to get the right password.

System adjustment

◆ Regola Parametro

Regolazione Diretta		
Item	Default values	Values
Scommessa Minima	10	10、20、30、40、50、100、200、250
Scommessa Massima	1000	10、20、30、40、50、100、200、500、1000
Limite di credito	100000	5000、6000、10000、15000、20000、30000、50000、100000、150000、200000、500000、1000000、2000000、5000000、10000000、90000000
Limite di Sistema	200000	10000、15000、20000、30000、40000、50000、100000、150000、200000、300000、500000、1000000、2000000、5000000、10000000、20000000、50000000、90000000
Rapporto Banconota	1	1/100、1/80、1/50、1/25、1/15、1/10、1/8、1/5、1/4、1/3、1/2、1、2、3、4、5、8、10、15、20、25、50、80、100
Withdraw Mode	Chiave in uscita (Moneta)	Chiave in uscita (Moneta)、Chiave in uscita (Banconota)、Uscita Automatica (Moneta)、Uscita Automatica (Banconota)、Immediata keyout、Ticket out in game、Coin out in game
BGM	On	Off、On、SE、BGM
Volume	4	0、1、2、3、4、5、6、7
Velocità di Scatto	Media	Lento、Media、Veloce
Velocità Proiettile	Lento	Lento、Media、Veloce
Tempo d'innesco Automatico	Media	No、Lento、Media、Veloce
Bet Increase Rate	10	1、2、5、10、20、50、100、200、500、1000
Quantità di Stazione	8	4、6、8、10

Game Description

◆ Game play instructions

《Frutti di mare Paradiso》 Based on the marine fishing theme of the plane LCD monitor — lottery-type game, the game uses a high-definition screen design, the use of full-color high-definition scene dynamic production, support 4/6/8/10 while online games. 19 different types of fish, three kinds of powerful special weapons, a clear definition and detailed undersea scene. It's the most popular game machine in your Game center.

◆ Game Features Description

■ Suddenly appear special weapons—Energy Laser, Power Grid and Invincible Bomb for FREE!! In addition to its amazing visual effects, it also gives you High-Score rewards. (Special weapons will shoot automatically if player didn't launch in 5 minutes.

Energy Laser—Slit fishes in a straightforward direction

Power Grid—Last in the fields in a sustained 5 seconds

Invincible Bomb—Damage all fishes in the field at a time

■ Lucky Fish—When killing the lucky fish, player will get a x2~x10 Bonus reward for any kind of fish. Maximum reward is 1000 time Bets!!

■ Convenient Operation: Auto Attack, Aim Attack makes the game operation more convenient and easy!! You can hit any fish as you wish!!

■ Timer Bomb: Shoot the Timer Bomb cause undersea storm!! The storm will attack all fishes in the field. Fishes killed by the storm belong to the player who launches the Timer Bomb.

■ Fish King: Fishes surrounded by dolphin ring become Fish King. Killing the Fish King causes all same kind of fishes in the field die and gets the scores.

Game Description

◆ Odds Table

	X2		X3		X4
	X4		X5		X5
	X8		X8		X10
	X10		X12		X15
	X18		X20		X25
	X30		X40		X50
					X100

Operating Instructions

◆ Operation Panel Instruction



Direction Controller



Shoot



Raise Bet

◆ Basic Operations

It's easy to play!! After insert coins to credit, select your bet by Raise Bet button, aim your target by Direction Controller and SHOOT!!

◆ Play skills

Use your special weapons well to win Huge score rewards. Select your launch timing, aim your target at fishes cluster. If you are lucky, get the biggest 100 bet fish multiply 10 times is not just dreaming.

◆ Special Operation

Auto Attack: Press the "Shoot Button" 3 seconds to launch.

Aim Attack: Press the direction controller "Down" for 3 seconds to launch.

After launched, press "Up or Down" to select fish to aim.