



# User's Manual

# Index

- **Game Description** ..... P.01
- **Operating Instructions** ..... P.03
- **System adjustment** ..... P.04
- **Cable definition** ..... P.06

# Game Description

## ★【Game play instructions】

《Seafood Paradise 3 USA》 Based on the marine fishing theme of the plane LCD monitor — lottery-type game, the game uses a high-definition screen design, support 4/6/8/10 while online games. 16 different types of fish, 7 kinds of powerful special weapons, a clear definition and detailed undersea scene. It's the most popular game machine in your Game center.

## ★【Game Features Description】

### ▶ Special item—Floating in the field. Attack them to release special power!!

- ◆ **Magical Firework Rocket** → The Witch will summon the fish guards at any time. Attack the witch will detonate the Firework Rocket , killing all ordinary fish on the screen.
- ◆ **Freezing Cannon** → Shot a huge frozen flame, Frozen fish on it's route. The frozen fish has a great chance of death.
- ◆ **Thunder Hammers** → Fire 3 Charged hammer at random locations, causing area attack damage to all fish within a small range.
- ◆ **Miracle Fairy** → Eject a lot of Miracle Fairies, catching fishes in the field. The bigger fish need more Miracle Fairies to catch.
- ◆ **Breaker Thom Ball**→ Attack blowfish while shining cause thorn ball blast.

### ▶ Special Fish

- ◆ **Fish King**→ Killing the Fish King also kill all same kind of fishes in the field .
- ◆ **Lucky Fish**→ When killing the lucky fish, player will get a x2~x5 Bonus reward for any kind of fish.


# Game Description

## ★(Odds Table)

			
x2	x3	x4	x5
			
x8	x10	x12	x15
			
x18	x20	x25	x30
			
x50	x80	x150	
			
x300			

# Operating Instructions

## ★【Operation Panel Instruction】

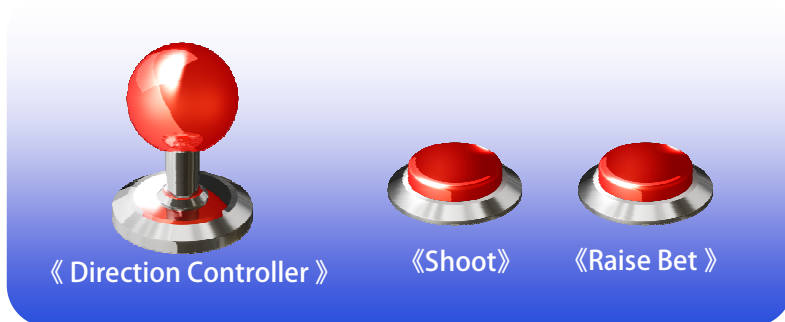

## ★【Basic Operations】

- ▶ It's easy to play!! After insert coins to credit, select your bet by Raise Bet button, aim your target by Direction Controller and SHOOT!!

### ! CAUTION

- ◆ **Auto Attack** → Press the "Shoot Button" 3 seconds to launch.
- ◆ **Aim Attack** → Press the direction controller "Down" for 3 seconds to launch. After launched, press "Up or Down" to select fish to aim.

## ★【Play skills】

- ▶ Use your special weapons well to win Huge score rewards. Select your launch timing, aim your target at fishes cluster. If you are lucky, get the biggest 300 bet fish multiply 10 times is not just dreaming.

# System Adjustment

## ★【Parameter Adjust—Direct Adjust】

Item	Default	Values
Minimum Bet	10	1、2、5、10、20、30、40、50、100、200、250
Maximum Bet	1000	10、20、30、40、50、100、200、500、1000
Bet Increase rate	10	1、2、5、10、20、50、100、200、500、1000
Credit Limit	1000000	5000、6000、10000、15000、20000、30000、50000、100000、150000、200000、500000、1000000、2000000、5000000、90000000
System Limit	5000000	10000、15000、20000、30000、40000、50000、100000、150000、200000、300000、500000、1000000、2000000、5000000、10000000、20000000、50000000、90000000
Ticket Ratio	1	1/100、1/80、1/50、1/25、1/15、1/10、1/8、1/5、1/4、1/3、1/2、1、2、3、4、5、8、10、15、20、25、50、80、100
Withdraw Mode	Key Out (Coin)	Key Out (Coin)、Key Out (Ticket)、Auto Out (Coin)、Auto Out (Ticket)、Immidiata key-out、Coin out in game、Ticket out in game
Shooting Speed	Medium	Slow、Medium、Fast
Bullet Speed	Medium	Slow、Medium、Fast
Auto Trigger Time	No	No、Slow、Medium、Fast
Auto shoot	On	On、Off
LOCK	On	On、Off
Station Quantity	8(3-1)	2(2-0)、3(3-0)、4(2-2)、4(4-0)、6(2-1)、6(3-0)、8(2-2)、8(3-1)、8(4-0)、10(3-2)、10(4-1)
BGM	On	Off、On、SE、BGM
Volume	4	0、1、2、3、4、5、6、7、8

# System Adjustment

## ★【Parameter Adjust—Report Adjust】

Item	Default	Parameters
Coin Ratio	100	1, 2, 5, 10, 20, 25, 50, 100, 200, 250, 500, 1000
Key In Ratio	1000	100, 200, 250, 500, 1000, 2000, 2500, 5000, 10000, 20000, 25000, 50000, 100000
Game Difficulty	2	0, 1, 2, 3, 4, 5
Location Scale	Medium Location	Large Location, Medium Location, Small Location
Bonus Odds Rate	Mid	High, Mid, Low, Off
Report Time period	10	1 ~ 30
Profit Limit to Report	100000	10000 ~ 300000
System Time	-	
Change Password	-	

### ! CAUTION

Total record default password : 「 0000 0000 」

# Cable Definition

Up	1	2	Down
Left	3	4	Right
Raise bet	5	6	Shoot
Coin in	7	8	Key in
Key out	9	10	Pay out
Ticket SW	11	12	Hopper SW
Ticket SSR	13	14	Hopper SSR
Shoot lamp	15	16	Raise bet lamp
+12V	17	18	+12V
+12V	19	20	+12V
+5V	21	22	Ground
Ground	23	24	Ground
Ground	25	26	Ground





# Note



# Note



# Note

