



User's Manual

Index

- **Game Description** P.01
- **Operating Instructions** P.03
- **System adjustment** P.04
- **Cable definition** P.06

Game Description

★【Game play instructions】

《 Buddha's Palm 》 Based on the marine fishing theme of the plane LCD monitor — lottery-type game, the game uses a high-definition screen design, support 4/6/8/10 while online games. 19 different types of fish, 10 kinds of powerful special Items, a clear definition and detailed undersea scene. It's the most popular game machine in your Game center.

★【Game Features Description】

▶ Special item—Floating in the field. Attack them to release special power!!

- ◆ Dragon Ball→ Randomly upgrade normal bullet to powerful Dragon Ball for free.
- ◆ Blasting Firecracker→ Cause Blasting Firecracker explode while defeated. Attacking all fishes near exploding area.
- ◆ Ancient Cannon→ Cause Ancient Cannon explode while defeated. Killing all normal fish in the field at once.

▶ Special Fish

- ◆ Fish King → Kill all same kind fishes in the field.
- ◆ Treasure Dragonboat → Attack Treasure Dragonboat has a chance to drop random jewelry. Success break it will win high score award.
- ◆ Pearl Roulette → Collect 5 corals drop form the Treasure Dragonboat will launch Pearl Roulette. Win the additional bonus scores.
- ◆ Fiery Dragon → Get x500~800 randomly.
- ◆ Golden Turtle → Get x200~500 randomly.
- ◆ Silver Turtle → Get x100~200 randomly.
- ◆ Buddha's Palm → Rulai Buddha attacks a wide range of fishes.

Game Description

★ [Odds Table]

		
x2	x2	x3
		
x4	x5	x6
		
x7	x8	x9
		
x10	x12	x15
		
x18	x20	x25
		
x30	x40	x60
		
x80		

Operating Instructions

★【Operation Panel Instruction】



★【Basic Operations】

- ▶ It's easy to play!! After insert coins to credit, select your bet by Raise Bet button, aim your target by Direction Controller and SHOOT!!

! CAUTION

- ◆ **Auto Attack** → Press the "Shoot Button" 3 seconds to launch.
- ◆ **Aim Attack** → Press the direction controller "Down" for 3 seconds to launch. After launched, press "Up or Down" to select fish to aim.

★【Play skills】

- ▶ Use your special weapons well to win Huge score rewards. Select your launch timing, aim your target at fishes cluster.

System Adjustment

★ [Parameter Adjust-Direct Adjust]

Item	Default	Parameters
Minimum Bet	50	1, 2, 5, 10, 20, 30, 40, 50, 100, 200, 250
Maximum Bet	1000	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 20, 30, 40, 50, 100, 200, 500, 1000
Bet Increase rate	10	1, 2, 5, 10, 20, 50, 100, 200, 500, 1000
Credit Limit	1000000	5000, 6000, 10000, 15000, 20000, 30000, 50000, 100000, 150000, 200000, 500000, 1000000, 2000000, 5000000, 10000000, 20000000, 50000000, 90000000
System Limit	2000000	10000, 15000, 20000, 30000, 40000, 50000, 100000, 150000, 200000, 300000, 500000, 1000000, 2000000, 5000000, 10000000, 20000000, 50000000, 90000000
Ticket Ratio	1	1/100, 1/80, 1/50, 1/25, 1/15, 1/10, 1/8, 1/5, 1/4, 1/3, 1/2, 1, 2, 3, 4, 5, 8, 10, 15, 20, 25, 50, 80, 100
Withdraw Mode	Key Out (Coin)	Key Out(Coin) 、 Key Out(Ticket) 、 Coin out in game 、 Ticket out in game
Shooting Speed	Medium	Slow 、 Medium 、 Fast
Bullet Speed	Medium	Slow 、 Medium 、 Fast
Auto Trigger Time	No	No 、 Slow 、 Medium 、 Fast
Auto shoot	On	Off 、 On
Station Quantity	8(3-1)	2(2-0) , 3(3-0) , 4(2-2) , 4(4-0) , 6(2-1) , 6(3-0) , 8(2-2) , 8(3-1) , 8(4-0) , 10(3-2) , 10(4-1)
BGM	On	Off 、 On 、 SE 、 BGM
Volume	4	0, 1, 2, 3, 4, 5, 6, 7, 8

System Adjustment

★【Parameter Adjust-Report Adjust】

Item	Default	Parameters
Coin Ratio	100	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 20, 25, 50, 100, 200, 250, 500, 1000
Key In Ratio	1000	100, 200, 250, 500, 1000, 2000, 2500, 5000, 10000, 20000, 25000, 50000, 100000
Game Difficulty	3	0, 1, 2, 3, 4, 5
Location Scale	Medium Location	Small Location, Medium Location, Large Location
Report Time period	10	1 ~ 30
Profit Limit to Report	100000	10000 ~ 300000
System Time	--	YYYY/MM/DD HH:MM:SS
Change Password	00000000	



CAUTION

Total record default password : 『 0000 0000 』

Cable Definition

Up	1	2	Down
Left	3	4	Right
Raise bet	5	6	Shoot
Coin in	7	8	Key in
Key out	9	10	Pay out
Ticket SW	11	12	Hopper SW
Ticket SSR	13	14	Hopper SSR
Shoot lamp	15	16	Raise bet lamp
+12V	17	18	+12V
+12V	19	20	+12V
+5V	21	22	Ground
Ground	23	24	Ground
Ground	25	26	Ground



NOTE



NOTE



NOTE



20180620 V100M1