

User's Manual

Index

Game Description P.0
Operating Instructions ·····P.0
System adjustment ·····P.0
Cable definition ·····P.0
Troubleshooting······P.0

Note



Note

Game Description

A (Game play instructions)

Mechanical Centipede USA Based on the marine fishing theme of the plane LCD monitor — lottery-type game, the game uses a high-definition screen design, support 2/3/4/6/8/10 while online games. 15 different types of insect, 9 kinds of powerful special weapons, a clear definition and detailed nature scene. It's the most popular game machine in your Game center.

Game Features Description)

▶ Special Item—Floating in the field. Attack them to release special power!!



Sprinkling powder bombs all normal insects on the field.



Release lightning to attack all normal insects continuously.



Black widow will use silk to sniper insect on the field.



Find the correct dead leaf to get rewards.



Defeat it, its body will turn into bomb and explode.

► Special Insect



Catch the Royal Beetle, get a X2~X10 bonus reward randomly.



Shooting it will increase its reward. Defeat it, it will stick all normal insects. Catch the stuck insects will 100% get double rewards.



The reward will upgrade randomly. Catch insect with Morra symbol, then play morra game with magical apple. If you

win, the reward will double up. Gain more rewards per win. Get reward by pressing power button.





Came Description

Note

☆ (Odds Table)

**	*		2 :
x2	х3	x4	x5
x8	x10	x12	x15
x18	x20	x25	x30
x40	x60	x80	





Troubleshooting

Message	Solution
ble, appearing the faulty	Please check the Communication line and Cabinet.

CAUTION

If the control Board and accessories are defective, please try another VGAME's mother board.

Operating Instructions

★ (Operation Panel Instruction)



☆ [Basic Operations]

▶ It's easy to play!! After insert coins to credit, select your bet by Raise Bet button, aim your target by Direction Controller and SHOOT!!

CAUTION

- ◆ Auto Attack→Press the "Shoot Button" 3 seconds to launch.
- ◆ Aim Attack → Press the direction controller "Down" for 3 seconds to launch. After launched, press "Up or Down" to select bird to aim.

* (Play skills)

▶ Use your special weapons well to win Huge score rewards. Select your launch timing, aim your target at insects cluster.





System Adjustment

☆ [Parameter Adjust-Direct Adjust]

	Default	Parameters		
mum Bet	50	1~10,20,30,40,50,100,200,300,400,500, 1000, 2000, 3000, 4000, 5000, 9999		
imum Bet	1000	1~10,20,30,40,50,100,200,300,400,500, 1000, 2000, 3000, 4000, 5000, 9999		
crease rate	10	1~10,20,30,40,50,100,200,300,400,500, 1000, 2000, 3000, 4000, 5000, 9999		
dit Limit	1000000	5000,6000,10000,15000,20000,25000,30000,40000,50000,100000,150000,200000,250000,400000,500000,1000000,2000000,2500000,4000000,5000000,10000000,20000000,25000000,25000000,4000000,4000000,50000000,50000000,90000000		
em Limit	2000000	30000,40000,50000,100000,150000,200000, 250000,300000,400000,500000,600000, 800000,1000000,2000000,2500000,2700000, 3000000,4000000,5000000,6000000, 8000000,10000000,50000000,60000000, 30000000,40000000,50000000,60000000, 80000000,90000000		
rra Limit	2000000	No,50000,100000,300000,500000,1000000, 2000000,3000000,4000000,5000000,6000000, 10000000,20000000,50000000,90000000		
ket Ratio	1	1/100,1/80,1/50,1/25,1/20,1/15,1/10,1/8,1/5, 1/4,1/3,1/2,1,2,3,4,5,8,10,15,20,25,30, 35, 40, 45, 50,80,100		
draw Mode	Menu (Coin)	Menu(Coin) \ Menu(Ticket) \ Key Out(Coin) Key Out(Ticket) \ Game(Coin) \ Game(Ticket) \ Print voucher		
ting Speed	Medium	Slow \ Medium \ Fast		
et Speed	Medium	Slow \ Medium \ Fast		
rigge Time	No	No · Slow · Medium · Fast		
to shoot	On	Off · On		
LOCK	On	Off • On		
r Steering	Standard	Inverse Standard		
n Quantity	8(3-1)	2(2-0),3(3-0),4(2-0),4(4-0),6(2-1),6(3-0), 8(2-2),8(3-1),8(4-0),10(3-2),10(4-1)		
		Off \ On \ SE \ BGM		
BGM	On	Off · On · SE · BGM		
	imum Bet imum Bet imum Bet icrease rate dit Limit tem Limit tem Limit ket Ratio draw Mode ting Speed let Speed Trigge Time to shoot LOCK er Steering on Quantity	imum Bet 1000 imum Bet 1000 icrease rate 10 dit Limit 1000000 tem Limit 2000000 crra Limit 2000000 ket Ratio 1 draw Mode (Coin) ting Speed Medium (Coin) ting Speed Medium Trigge Time No to shoot On LOCK On er Steering Standard on Quantity 8(3-1)		

Troubleshooting

Message	Solution
Message Please Report Your Records	Solution (You also can check the report time period whether it depends on the operator setting) If it's still defective, please contact us. Please reset with the coder. (If you adjust the Coin Ratio, then you will key in number with
[2]	the coder. Finally, you reset with the coder.)
Please Report Your Records	If it's still defective, please contact us. Then, tell us what appears on the screen.
Please Report Your Records [4]	If it's still defective, please contact us. Then, tell us what appears on the screen.
Appearing "999" on the game screeen	If it's still defective, please contact us. Then, tell us what appears on the screen.
Linked line error on the screen	Make sure the control Board's voltage is set on 12V and 5V at the same time, then check the Communication line.



Troubleshooting

Message	Solution
Error on the same seat	Make sure the control Board's voltage is set on 12V and 5V at the same time, then check the communicated line is normal. By the way, please also check the Du Pont line (Rainbow line) is normal or not.
Error on the different seat	Testing the Du Pont line (Rainbow line) on the each seats. If the different seats are broken, please check the Du Pont line and Button.
Unable to play on the all seats	Make sure the communication line is normal.
Coin Out error	Make sure the cash box are empty or not. Then, check solving the problem successfully.
Unable to Coin Out	Please don't set the zero on the Coin Ratio.
COIN LIMIT	The system notice unable to key in, but it can keep on playing the game.
SYSTEM LIMIT	If it can't play successfully, please press the "Key out" on the seat. Then, check solve the problem.

System Adjustment

☆ [Parameter Adjust-Report Adjust]

ltem	Default	Parameters
Coin Ratio	100	0,1,2,4,5,10,20,25,40,50,100,200,250 400,500,1000,2000,3000,4000,5000, 10000
Key In Ratio	1000	0,10,20,25,40,50,100,200,250,400,500, 1000,2000,2500,4000,5000,10000,20000, 30000,40000,50000,100000
Game Difficulty	6	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14, 15,16,17,18,19,20
Location Scale	Medium Loca- tion	Small Location 、 Medium Location 、 Large Location
Bonus odds rate	Mid	Low , Mid , High
Report Time period	10	0 ~ 30
Profit Limit to Report	100000	0,10000,20000,, 300000
System Time		YYYY/MM/DD HH:MM:SS
Change Password	00000000	

CAUTION

Total record default password : [0000 0000]





Cable Definition

Up	1	2	Down
Left	3	4	Right
Raise bet	5	6	Shoot
Coin in	7	8	Key in
Key out	9	10	Pay out
Ticket SW	11	12	Hopper SW
Ticket SSR	13	14	Hopper SSR
Shoot lamp	15	16	Raise bet lamp
+12V	17	18	+12V
+12V	19	20	+12V
+5V	21	22	Ground
Ground	23	24	Ground
Ground	25	26	Ground

Troubleshooting

★Intimate Reminder

- 1. VGAME's product wire accessories are specially made, and are different from commercially available accessories. Please use the shipped accessories.
- 2. Our accessories are different from accessories provided by other developers. Please refer to the layout picture as follow.
- 3. The control board's voltage must be simultaneously 12V and 5V. Please insert right to left from outside.
- 4. Please don't often clear current profits and move it over to total profit so as to affect the manner the games pays out.

★Wrong decision

Message	Solution
Boot appear no picture on screen	Reinserting IC (ROM) for checking may solve the problem. If it is still defective, please contact us.
Please Report Your Records [1]	Please report your records with the coder.
Appearing the report your records page continuously	If the system's time is error on the backstage, you can replace the lithium battery on the board.



