



User's Manual

Index

- [Game Description](#) P.01
- [Operating Instructions](#) P.02
- [System Adjustment](#) P.03
- [Record System Operating Instructions](#) P.05
- [Troubleshooting](#) P.06

Troubleshooting

Message	Solution
The game screen is unstable, appearing the faulty line.	Please check the Communication line and Cabinet.

CAUTION

If the control Board and accessories are defective, please try another VGAME' s mother board.

Troubleshooting

Message	Solution
Error on the same seat	Make sure the control Board's voltage is set on 12V and 5V at the same time, then check the communicated line is normal. By the way, please also check the Du Pont line (Rainbow line) is normal or not.
Error on the different seat	Testing the Du Pont line (Rainbow line) on the each seats. If the different seats are broken, please check the Du Pont line and Button.
Unable to play on the all seats	Make sure the communication line is normal.
Coin Out error	Make sure the cash box are empty or not. Then, check solving the problem successfully.
Unable to Coin Out	Please don't set the zero on the Coin Ratio.
COIN LIMIT	The system notice unable to key in, but it can keep on playing the game.
SYSTEM LIMIT	If it can't play successfully, please press the "Key out" on the seat. Then, check solve the problem.

Game Description

★ (How to play)

 
- ▶ Super BlackJack is a game that players against the dealer. Game uses 8 decks of cards.
- ▶ Compare the hands, the closer to 21 is the winner. Hand's point must be equal to or less than 21 points. If hand's point more than 21 points is called Bust.
- ▶ Players can choose 【Stand】、【Hit】、【Double】、【Split】、【Surrender】
 - ▶ Double : You can double your bet when you start with two cards in your hand.
 - ▶ Split : Pair can be split, no more than 3 hands.
 - ▶ SP. Rule of spilt : A pair of aces can be split, but only send one card. If take 10-value, it just be 21 points not BlackJack.
 - ▶ Surrender : If you Surrender, dealer takes half of the chips and return the other half.

★ (The value of the hand)

- ▶ Numbered from 2-10 are worth their face value, face cards are worth 10.
- ▶ Aces are worth 1 or 11. If the player will bust with an ace, the ace counts as 1 point.
- ▶ If player total is the same as the dealer's, player's bet will be returned.


★ (Special Rules)

- ▶ Classic BlackJack : BlackJack composed of Ace and J of spades.
- ▶ Flush BlackJack : BlackJack composed of Ace and J of the same suit.
- ▶ BlackJack : BlackJack consists of an Ace and a 10-value card.
- ▶ 777 : Player's hand is 3 7-point cards.
- ▶ Any Pair : First two-card with the same face.
- ▶ Insurance : If dealer's first card is an Ace, player can buy insurance or not.

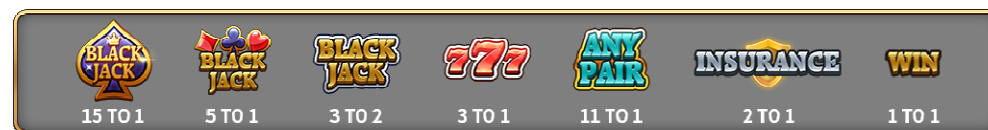

Operating Instructions

 ★ [Operation Panel Instruction]

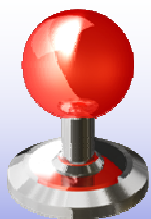

Hold Up : Bet again
Hold Down : Open Tips



Small Button
Bet on Pairs




Big Button
Bet

★ [Cable Definition]

Up	1	2	Down
Left	3	4	Right
Bet on Pairs	5	6	Bet
Coin in	7	8	Key in
Key out	9	10	Pay out
Ticket SW	11	12	Hopper SW
Ticket SSR	13	14	Hopper SSR
Bet	15	16	Bet on Pairs
+12V	17	18	+12V
+12V	19	20	+12V
+5V	21	22	Ground
Ground	23	24	Ground
Ground	25	26	Ground

Troubleshooting

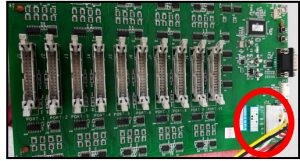
Message	Solution
	(You also can check the report time period whether it depends on the operator setting) If it's still defective, please contact us.
Please Report Your Records 【2】	Please reset with the coder. (If you adjust the Coin Ratio, then you will key in number with the coder. Finally, you reset with the coder.)
Please Report Your Records 【3】	If it's still defective, please contact us. Then, tell us what appears on the screen.
Please Report Your Records 【4】	If it's still defective, please contact us. Then, tell us what appears on the screen.
Appearing "999" on the game screen	If it's still defective, please contact us. Then, tell us what appears on the screen.
Linked line error on the screen	Make sure the control Board's voltage is set on 12V and 5V at the same time, then check the Communication line. 

Troubleshooting

★ 【Intimate Reminder】

- 1.The system backstage is the original factory initial value, please adjust the backend setting value according to the site.
- 2.VGAME' s product wire accessories are specially made, and are different from commercially available accessories. Please use the shipped accessories.
- 3.Our accessories are different from accessories provided by other developers. Please refer to the layout picture as follow.
- 4.The control board' s voltage must be simultaneously 12V and 5V. Please insert right to left from outside.
- 5.Please don' t often clear current profits and move it over to total profit so as to affect the manner the games pays out.

★ 【Wrong decision】

Message	Solution
Boot appear no picture on screen	Reinserting IC (ROM) for checking may solve the problem. If it is still defective, please contact us. 
Please Report Your Records 【1】	Please report your records with the coder.
Appearing the report your records page continuously	If the system' s time is error on the backstage, you can replace the lithium battery on the board.

System Adjustment

★ 【Parameter Adjust—Direct Adjust】

Item	Default	Parameters
Minimum Bet	50	1,2,5,10,20,30,40,50,100,200,250
Maximum Bet	2000	10,20,30,40,50,100,200,500,1000,2000,2500,3000,5000,10000
Min.Bet on Any-Pair	10	1,2,5,10,20,30,40,50,100,200,250
Max.Bet 55on Any-Pair	500	10,20,30,40,50,100,200,500,1000,2000,2500,3000,5000
Bet increase rate	10	5,10,20,50,100,200
Bet Time	20	5,10,15,20,25,30,35,40,50
Increasing bet time	10	5,10,15,20,25,30,35,40,50
Ticket Ratio	1	1/100,1/80,1/50,1/25,1/15,1/10,1/8,1/5,1/4,1/3,1/2,1,2,3,4,5,8,10,15,20,25,50,80,100
Withdraw Mode	Key Out (Ticket)	Key Out (Coin) 、 Key Out (Ticket) 、 Coin out in game 、 Ticket out in game 、 Key Out(Print Voucher)
Residual Credit handling	0	0,10,30,60,180,300,600
Player Steering	Standard	Inverse 、 Standard
Station Quantity	6(2-1)	6(2-1) 、 8(3-1) 、 10(3-2) 、 3(3-0) 、 4(4-0) 、 5(5-0)
BGM	On	Off 、 On 、 SE 、 BGM
Volume	4	0,1,2,3,4,5,6,7,8
Reward Appearance	On	On , Off

System Adjustment

★ 【Parameter Adjust—Report Adjust】

Item	Default	Parameters
Coin Ratio	10	1,2,5,10,20,25,50,100,200,250,500,1000
Coin 1 Ratio	100	10,20,50,100,200,250,500,1000,2000,2500,5000,10000,20000,25000,50000,100000
YXND (Game Difficulty)	6	0~20
YXLX (Location Scale)	M	S,M,B
Credit Limit	100000	5000,6000,10000,15000,20000,30000,50000,100000,150000,200000,400000,500000,600000,1000000
System Limit	200000	10000,15000,20000,30000,40000,50000,100000,150000,200000,300000,500000,1000000,1500000,2000000,2500000
Report Time period	30	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 55, 60, 65, 70, 75, 80, 85, 90, 95, 100, 9999
Profit Limit to Report	300000	30000~99990000
Link Prize Coin rate	100	1, 2, 3, 4, 5, 10, 20, 25, 30, 40, 50, 100, 200, 250, 300, 400, 500, 1000, 2000, 2500, 3000, 4000, 5000, 10000, 20000, 25000, 30000, 40000, 50000, 100000
Link Prize Distribution	100	0, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100, 110, 120, 130, 140, 150, 200, 250, 300, 350, 400, 500

Record System Operating Instructions

★ 【System Operation】

! CAUTION

You can operation with the USB keypad.

In the situation of betting or selecting the hold cards ,press “Enter” key on the keyboard to enter game Record menu.

Press “2/8” to move the Cursor Up / Down.

Press “Enter” to enter the selected option.

- ▶ **Recent records** (Record last 20 awards content , use “2/8” select prev / next data . Use “Enter” to exit)
- ▶ **Record**
Current Record (Press “*” to reset Current Record)
Total Record (password is necessary)
- ▶ **Direct Adjust** (password is necessary)
After setting up ,select the option “Save & Exit” to save all changes.
- ▶ **Report**
- ▶ **Reset**
Both of “Report” and “Reset” , You must return all the data on the screen to the agent, to get a 30-digit Report code .
Then enter the Report code correctly, press the “*” key for confirmation. Cancellation and exit presses “Enter” .
Wait for the screen appears the word “password correct”, “ Report code” action is complete.
- ▶ **Test**
- ▶ **Exit**

! CAUTION

The total amount record page requires a password to access.

The password can be changed on the Parameter Adjustment page.

※ Total record default password : 『 0000 0000 』