



User's Manual

Index

- About Sushi Master..... 1
- Game setting..... 6
- Troubleshooting..... 8
- Game Control..... 9
- Cable Definition..... 10

NOTE

CAUTION

- ◆ Before using this product, please read the user' s manual to ensure that the product is in normal situations and safe to use.
- ◆ Be sure to keep the user' s manual and housed in a safety place.

NOTE

About Sushi Master

▶ How to play

- ◆ Game info (like Credits, error message, etc.) will show in the lower left corner.
- ◆ Press power button to switch chopsticks, cat's paw and dish.
- ◆ Use joystick to aim sushi what you want, press shoot button to catch it.
- ◆ Successful get sushi, win tickets and start Lucky Match.

▶ On-Screen Displays



Tickets/Credits

Lucky Match

About Sushi Master

NOTE

▶ Sushi



Cable Definition

Up	1	2	Down
Left	3	4	Right
Raise bet	5	6	Shoot
Coin in	7	8	Key in
Key out	9	10	Pay out
Ticket SW	11	12	Hopper SW
Ticket SSR	13	14	Hopper SSR
Shoot lamp	15	16	Raise bet lamp
+12V	17	18	+12V
+12V	19	20	+12V
+5V	21	22	Ground
Ground	23	24	Ground
Ground	25	26	Ground

About Sushi Master

► Yakiniku Buffet

The master will entertain the guests who on seat. Let's eat as much as you can.



► Lucky Match

If you eat sushi, you will be treated to play Lucky Match. Match the sushi what you eat, win the prize.



◆ **Hot Pot King /Guess the Cup** —Start by spinning two same symbols icons in Lucky Match. You can keep winning special prize until you get wasabi.



About Sushi Master

▶ Happy Combo

Happy Combo show up anytime ! Complete the Happy Combo, Opportunity to get one of SP. Item.



◆ **Speedy Shovel** —Sprint on conveyor for 10 seconds. Sweep the sushi off the track.



◆ **Hyper Grapple** —Grab sushi 3 times in a wide range. Catch all the sushi on the field.



Game Control

★ [Control panel]



▶ Game Basic

After insert coin, player can press “Power” button to Switch chopsticks, use “Joystick” to aim targets in the field and use “Shoot” button to attack or catch targets. Successful get targets to earn tickets or credits.

▶ Controller

- Joystick**Move chopsticks to aim sushi.
- Shoot button**Use chopsticks to catch sushi.(use credits)
- Power button**Switch chopsticks, cat's paw and dish.

Troubleshooting


Problem	Cause	Corresponding methods
Power on but no signal	<ul style="list-style-type: none"> ● Power input is incorrect ● Fuse damaged ● Signal cable is not connected properly 	<ul style="list-style-type: none"> ● Confirm the power supply voltage is correct. ● Get a new fuse. ● Confirm signal cable is connected properly.
Power on with sound but no picture	<ul style="list-style-type: none"> ● Fuse damaged ● Screen power failure ● Inadequate power supply 	<ul style="list-style-type: none"> ● Get a new fuse. ● Replace the power supply. ● Confirm the power supply voltage is correct.
No sound	<ul style="list-style-type: none"> ● Volume size is set to zero or music setting off ● Speaker is broken 	<ul style="list-style-type: none"> ● Set the appropriate volume and sound setting in setting menu. ● Replace the speakers.
No response after insert coin	<ul style="list-style-type: none"> ● Coin not normally inserted ● Coin not applicable ● Coin slot damaged ● Broken wire within the device ● Not power on 	<ul style="list-style-type: none"> ● Insert coin again ● Use appropriate coin ● Change coin slot ● Connect power cord. ● Connect power cord.
Inconsistent of actual coin out and record.	<ul style="list-style-type: none"> ● Hopper malfunction ● Hopper return signal error 	<ul style="list-style-type: none"> ● Repair or replace the hopper ● Check hopper signal cable is ok.
Coin Jam	<ul style="list-style-type: none"> ● Confirm coin rail inside the machine ● Confirm coin selector inside 	<ul style="list-style-type: none"> ● Clear coin jam in the rail. ◦ ● Confirm coin selector switch settings are correct.
Joystick does not work properly	<ul style="list-style-type: none"> ● No coin inserted ● Joystick wiring is bad ● Joystick is malfunction 	<ul style="list-style-type: none"> ● Confirm coin function properly. ● Reconnect joystick cable to ensure proper connection. ● Replace the joystick.
Buttons does not work properly	<ul style="list-style-type: none"> ● No coin inserted ● Button wiring is bad ● Button is malfunction 	<ul style="list-style-type: none"> ● Confirm coin function properly. ● Reconnect button cable to ensure proper connection. ● Replace the button.

About Sushi Master

◆ **Grand Prize** —Large amount of prize is given, it' ll fill you up.




◆ **Special offer** —There's also have special offer that let you eat more sushi.

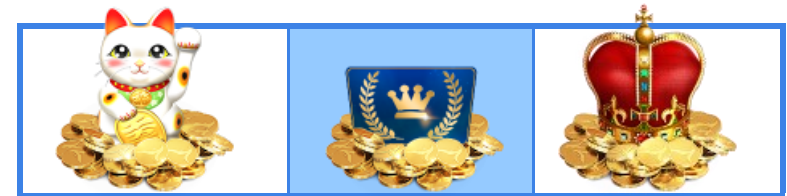

Game setting

Press "Enter" button on the keyboard to enter game setting menu.

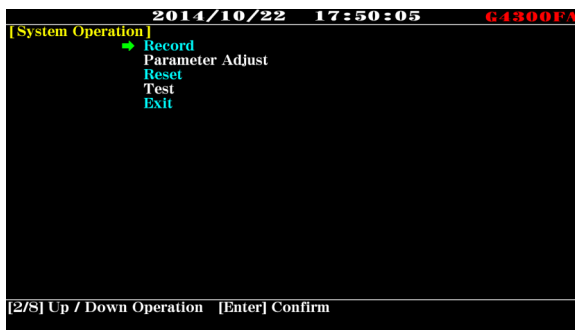

CAUTION

Total record default password : 「 0000 0000 」



- ◆ Profit Coin—Total Profit by key in/key out/coin in/coin out
- ◆ Key In Total —Total coin income from key.
- ◆ Key Out Total—Total coin payout from key.
- ◆ Coin In Total —Total coin income from coin box.
- ◆ Coin Out Total—Total coin payout from coin box.
- ◆ Operation Time—Total power on time has been in operation.
(Day / Hour)
- ◆ Played Time—Total non-zero credit time has been in operation.
(Day / Hour)

Game setting

★ 【Parameter Adjust-Direct Adjust】

Item	Default	Parameters
Credit Limit	5000	1000~100000
Withdraw Mode	Game(Ticket)	Key Out(Ticket), Game(Ticket), Game (Coin/Ticket)
Shooting Speed	Medium	Slow、Medium、Fast
Auto shoot	On	Off、On
Player Steering	Standard	Standard、Inverse
BGM	On	Off、On、SE、BGM
Volume	4	0, 1, 2, 3, 4, 5, 6, 7, 8

★ 【Parameter Adjust-Report Adjust】

Item	Default	Parameters
Coin Ratio	5	1、3、5
Ticket Ratio	30	10、15、20...40、45、50
System Time	-	
Change Password	-	