




User's Manual

Index

- Game DescriptionP.01
- Operating Instructions P.02
- System AdjustmentP.03
- Record System Operating Instructions.....P.05
- Cable Definition P.06
- Troubleshooting..... P.07

NOTE

Troubleshooting

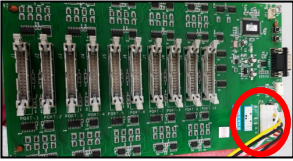
Message	Solution
	(You also can check the report time period whether it depends on the operator setting) If it's still defective, please contact us.
Please Report Your Records 【2】	Please reset with the coder. (If you adjust the Coin Ratio, then you will key in number with the coder. Finally, you reset with the coder.)
Please Report Your Records 【3】	If it's still defective, please contact us. Then, tell us what appears on the screen.
Please Report Your Records 【4】	If it's still defective, please contact us. Then, tell us what appears on the screen.
Appearing "999" on the game screen	If it's still defective, please contact us. Then, tell us what appears on the screen.
Linked line error on the screen	Make sure the control Board's voltage is set on 12V and 5V at the same time, then check the Communication line. 

Game Description

★ 【 How to play 】

- ▶ Player can play **X1 GAME & X5 GAME** in every round. Each player compare the set of 5 scroll with Farm owner (Central stage).
- ▶ In X5 GAME, Farm owner only wins up to X5 prize, but **player can win up to X55 prize.**
- ▶ In X1 GAME, Farm owner and player both get X1 prize.
- ▶ There will be 5 puppys with scroll running to player. **Make up any 3 scroll's point to multiples of 10** (J · Q · K=10) , and they are combined into set of "WOW", then use the two remaining scroll's point to ranking.
- ▶ After confirming the first 3 Scrolls, player can "Play More" if they have the advantage.

★ 【 Scroll-Set Ranking 】

- ▶ WOW-WOW > 9-WOW > 8-WOW > 7-WOW..... > 0-WOW.
- ▶ When the Scroll-Set's rank is the same, compare the point rank and puppy type.
- ▶ **Point rank** : K>Q>J>.....>2>A
- ▶ **Puppy type** : 

Combination	WOW-WOW	9-WOW	8-WOW · 7-WOW	6-WOW~ 0-WOW
Multiple	× 5	× 3	× 2	× 1


★ 【 SP.Set Only for Player 】

- ▶ 0-WOW-STR.:Player get following Scroll-Set : (3 · 4 · 5 · 6 · 7) 、 (6 · 7 · 8 · 9 · 10) or (7 · 8 · 9 · 10 · J).
- ▶ WOW-PAIR: **When the Central stage get WOW-WOW**, player's 3 scrolls of ten point & one pair will upgrade to WOW-PAIR. If the Center stage isn't get wow-wow, player's Scroll-Set can't upgrade to WOW-PAIR.
- ▶ 5 PUPPY: Player's Scroll-Set total point = **10 or less.**
- ▶ GOLD-WOW: Player's Scroll-Set all composed of **10, J, Q, K.**
- ▶ 4 OF A KIND · FLUSH · STRAIGHT · FULL HOUSE: As same as general card games.

0-WOW-STR	WOW-PAIR	4 OF A KIND	5 PUPPY	GOLD-WOW	FLUSH STRAIGHT FULL HOUSE
× 45~55	× 25~35	× 15~25	× 15	× 10	× 7

Operating Instructions

★ 【 Operation Panel Instruction 】

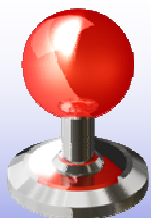

Hold Up :
Play again
Hold Down :
Hide info



Small Button
x1 game



Big Button
x5 game

★ 【 Cable Definition 】


Up	1	2	Down
Left	3	4	Right
x1 game	5	6	x5 game
Coin in	7	8	Key in
Key out	9	10	Pay out
Ticket SW	11	12	Hopper SW
Ticket SSR	13	14	Hopper SSR
x5 game key light	15	16	x1 game key light
+12V	17	18	+12V
+12V	19	20	+12V
+5V	21	22	Ground
Ground	23	24	Ground
Ground	25	26	Ground

Troubleshooting

★ 【 Intimate Reminder 】


- 1.The system backstage is the original factory initial value, please adjust the backend setting value according to the site.
- 2.VGAME' s product wire accessories are specially made, and are different from commercially available accessories. Please use the shipped accessories.
- 3.Our accessories are different from accessories provided by other developers. Please refer to the layout picture as follow.
- 4.The control board' s voltage must be simultaneously 12V and 5V. Please insert right to left from outside.
- 5.Please don' t often clear current profits and move it over to total profit so as to affect the manner the games pays out.

★ 【 Wrong decision 】

Message	Solution
Boot appear no picture on screen	Reinserting IC (ROM) for checking may solve the problem. If it is still defective, please contact us. 
Please Report Your Records 【1】	Please report your records with the coder.
Appearing the report your records page continuously	If the system' s time is error on the backstage, you can replace the lithium battery on the board.

Cable Definition

☆ [Anti-shock wiring diagram]

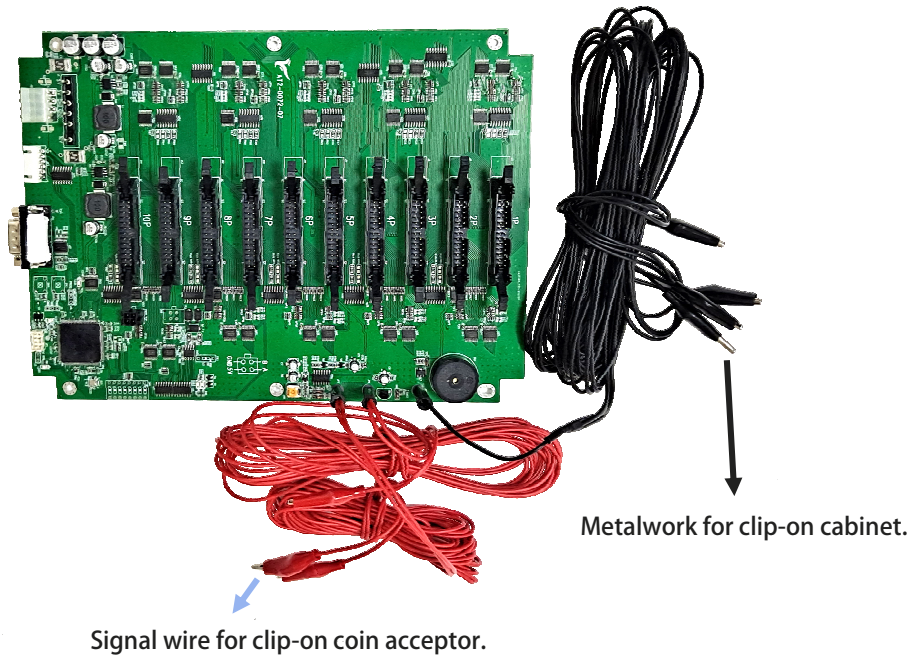

Signal wire for clip-on coin acceptor.

Metalwork for clip-on cabinet.

System Adjustment

☆ [Parameter Adjust—Direct Adjust]

Item	Default	Parameters
Minimum Bet	50	1,2,5,10,20,30,40,50,100,200,250
Maximum Bet	1000	10,20,30,40,50,100,200,500,1000,2000,2500,3000,5000,10000
Bet increase rate	10	5,10,20,50,100,200
Bet Time	20	5,10,15,20,25,30,35,40,50
Increasing bet time	10	5,10,15,20,25,30,35,40,50
Peek time	5	5,10,15,20,25,30,35,40,50
Ticket Ratio	1	1/100,1/80,1/50,1/25,1/15,1/10,1/8,1/5,1/4,1/3,1/2,1,2,3,4,5,8,10,15,20,25,50,80,100
Withdraw Mode	Menu (Coin)	Menu (Coin) · Menu (Ticket) · Key Out (Coin) · Key Out (Ticket) · Communication Mode · Print voucher
Player Steering	Standard	Inverse · Standard
TITTLE SWITCH	-	
Station Quantity	6(2-1)	2(2-0) · 3(3-0) · 4(4-0) · 6(2-1) · 6(3-0) · 8(3-1) · 10(3-2)
BGM	On	Off · On · SE · BGM
Volume	4	0,1,2,3,4,5,6,7,8
Reward Appearance	On	Off · On
Bill Validator Adjust	-	

System Adjustment

☆ [Parameter Adjust—Report Adjust]

Item	Default	Parameters
Coin Ratio	10	1,2,5,10,20,25,50,100,200,250,500,1000
Key In Ratio	100	10,20,50,100,200,250,500,1000,2000,2500,5000,10000,20000,25000,50000,100000
YXND (Game Difficulty)	6	0~20
YXLX (Location Scale)	M	S,M,B (Small, Medium, Large)
Credit Limit	100000	5000,6000,10000,15000,20000,30000,50000,100000,150000,200000,400000,500000,600000,1000000
System Limit	200000	10000,15000,20000,30000,40000,50000,100000,150000,200000,300000,500000,1000000,1500000,2000000,2500000
Report Time period	30	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 55, 60, 65, 70, 75, 80, 85, 90, 95, 100, 9999
Profit Limit to Report	300000	30000~99990000
Link Prize Coin rate	100	1, 2, 3, 4, 5, 10, 20, 25, 50, 100, 200, 250, 500, 1000
Link Prize Distribution	100	0, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100, 110, 120, 130, 140, 150, 200, 250, 300, 350, 400, 500
System Time	-	YYYY/MM/DD HH:MM:SS
Change Password	00000000	

Record System Operating Instructions

☆ [System Operation]

! CAUTION

You can operation with the USB keypad.
In the situation of betting or selecting the hold cards ,press "Enter" key on the keyboard to enter game Record menu.
Press "2/8" to move the Cursor Up / Down.
Press "Enter" to enter the selected option.

- ▶ **Recent records** (Record last 20 awards content , use "2/8" select prev / next data . Use "Enter" to exit)
- ▶ **Record**
Current Record (Press "*" to reset Current Record)
Total Record (password is necessary)
- ▶ **Direct Adjust** (password is necessary)
After setting up ,select the option "Save & Exit" to save all changes.
- ▶ **Report**
- ▶ **Reset**
Both of "Report" and "Reset" , You must return all the data on the screen to the agent, to get a 30-digit Report code .
Then enter the Report code correctly, press the "*" key for confirmation. Cancellation and exit presses "Enter" .
Wait for the screen appears the word "password correct", " Report code" action is complete.
- ▶ **Test**
- ▶ **Exit**

! CAUTION

The total amount record page requires a password to access.
The password can be changed on the Parameter Adjustment page.
※ Total record default password : 『 0000 0000 』